YETI 1250
SOLAR GENERATOR

User Guide

- Register your product
- Watch demo video
- Download user manual

Contact Us:
Toll Free: 888-794-6250
675 West 14600 South
Bluffdale, UT 84065
www.GOALZERO.com

We proudly support Tifie Humanitarian
www.tifie.org

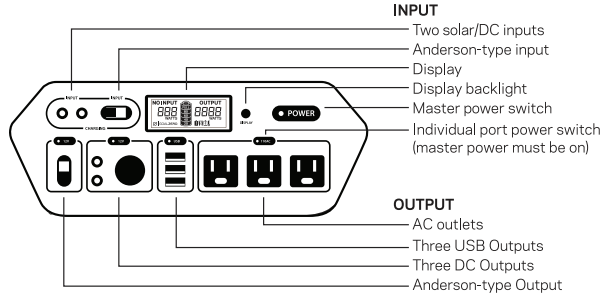

Know Your Gear

Technical Specifications	
Charge Times	
Charging With:	**Approximate Charge Times**
AC Wall Charger (80W)	16-20 hours
Goal Zero Boulder 30 x's 2	20-24 hours
Car Charger (30W), not included	40+ hours
Inputs	
2x 8mm Charge Ports	16-20V, 10A max (200W) each
Power Pole Charging Port	16-48V, 20A max (250W)
Internal	
Battery Type	Lead-acid (AGM)
Battery Capacity	1250Wh (12V, 100Ah)
Battery voltage range	11-14.8V
Life Span	Hundreds of cycles
Fuses	200A (4x50A fuses in parallel)
Inverter	1200W pure-sine wave inverter
Charge Controller	20A MPPT

General	
Shelf Life	Charge every 3-4 months
Chainable	Yeti 1250's and other 12V AGM batteries
Weight	103 pounds
Dimensions	410x305x370mm, 16"x11.5"x14.5"
Warranty	6 months
Tested and Certified	FCC, CE, and CSA
Operating usage temperature	20-105F, 6-40C
Optimal storage temperature	70F, 21C
Outputs	
2x AC outlets 220V 50 Hz or (3x AC outlets 110V, 60Hz) pure-sine wave, 1200W max total continuous, 1500W max short-duration	
Female 12V port 11-14V, 10A max(120@), unregulated	
2x 6mm 12V ports 11-14V, 6A max each (72W), unregulated	
12V Power Pole port 12-14V, 30A max (360W), unregulated	
3x USB ports	5V, 1.5A max (7.5W) each, regulated

CHARGE
From wall or solar panels.

POWER
Plug in devices, appliances, or power tools.

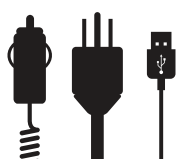

REPLENISH
To prolong battery life and stay prepared, leave plugged into wall or solar panels.

1 **2** **3**

Frequently Asked Questions

Q: Why does the battery indicator drop when I plug in my devices?
A: When using higher powered electronics, battery meter shows reduced capacity. This is normal. To see actual amount of power remaining in the battery, unplug all devices and wait 60 seconds.

Q: Should I keep my Yeti 1250 plugged in?
A: Having Yeti 1250 plugged into solar or the wall keeps the battery topped off. This prolongs battery life and ensures you are prepared for a power outage or activity.

Q: What kind of weather can the Yeti 1250 be exposed to?
A: Yeti 1250 will hold up in inclement weather, but is not waterproof. Make sure ports are dry before using device. Store in temps between 50-80 degrees for max output.

Q: How can I add more power?
A: Chain multiple together through the chaining port on the back panel. You can also chain the Yeti 1250 to a 12V battery for more power.

Q: The Yeti 1250 stopped working. What can I do?
A: This indicates a tripped switch. Push the button with a red light (the tripped switch) to reset it. Push it a second time for it to go green and restore power flow.

Q: The fans inside the Yeti 1250 are getting louder. Why?
A: As the inverter inside heats up, the fans power up at a proportional rate.

Q: This generator is heavy. What's the best way to move it?
A: Lift the unit with two people, using the handles. Use the Yeti cart for more mobility.